


## ASSEMBLY & FINISHING GUIDELINES

APRIL  
2018

This following two pages provide the recommended procedures for fixing and paint finishing **INEX>EXPRESS**.

### STEP 1: Assembly

Fix sheets according to the diagram below. 4 screws are required at each top hat for FRL 60/60/60 or BAL-FZ requirements. Otherwise use 3 screws. Carefully counter sink each screw ready for STEP 2.

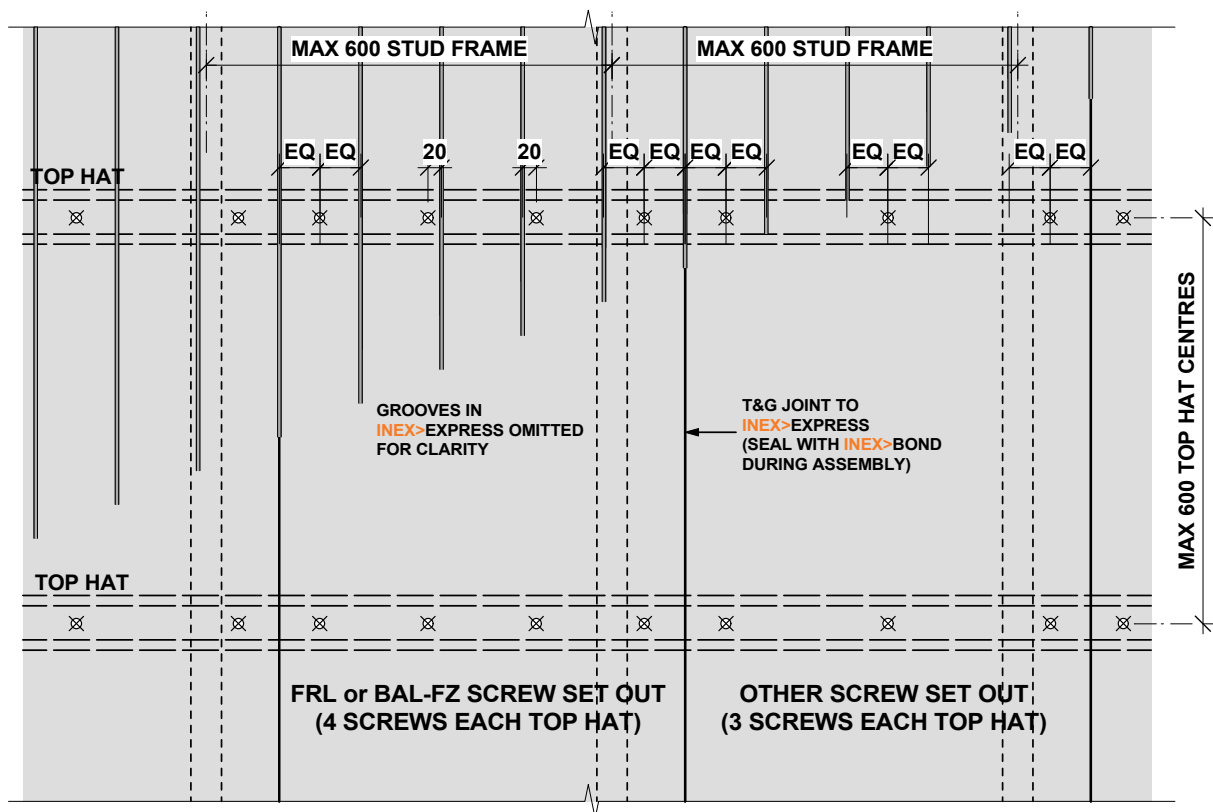

### STEP 2: Fill Screw Heads

Neatly fill all counter sunk screw heads with a non shrink GREY OR WHITE COLOURED grout, such as PORION EXTERIOR FLEXIBLE FILLER. Porion is available at most hardware stores in a ready mix pot. Prior to setting wipe clean the filled area in the direction of the boards.



### STEP 3: Apply First Coat

Ensure the boards are: dry, clean and dust free. Apply the first coat of your selected finishing system in accordance with the manufacturers application guide.

*See overleaf for further Steps.*

## STEP 4: Apply Second Coat

Apply the second coat to the boards. To achieve the best effect apply with a paint brush approximately 120mm wide – the same width of the panels in the boards. Apply to each full panel (top to bottom) separately and lay off down each panel before continuing to the next.

## STEP 5: Apply Final Coat

Apply the final coat to the boards using the same procedure as Step 4.



## COMPLETION



***Following the above guidelines will deliver an authentic long lasting finish.***